


CHIAYO


Operation manual

RP-5100M / RP-5016M
UHF Interlinking Transmitter Module

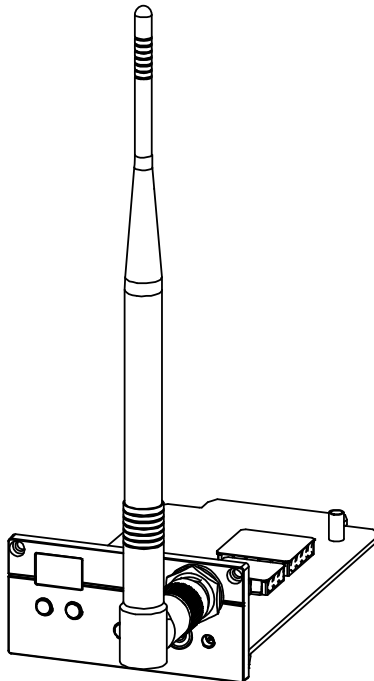

CHIAYO ELECTRONICS CO., LTD.



Parts and functions

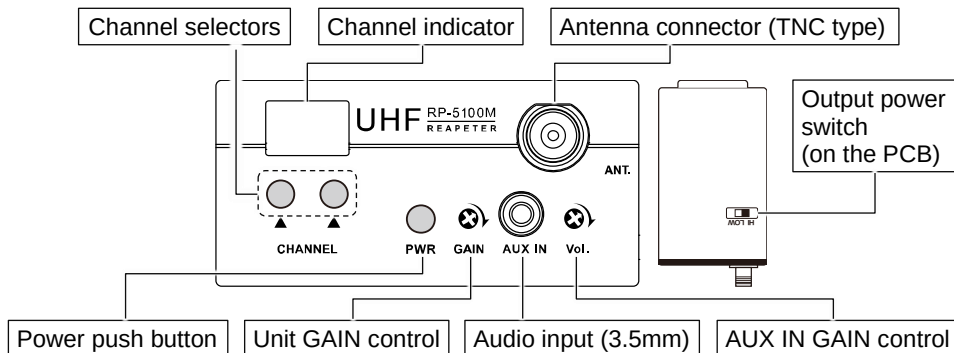

Changing channels on RP-5100M (100 channels)

Press LEFT ▲ button to increase the TENS-digit channel number.


Press RIGHT ▲ button to increase the UNIT-digit channel number.

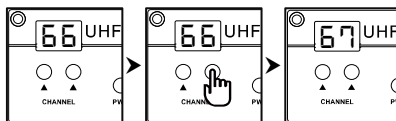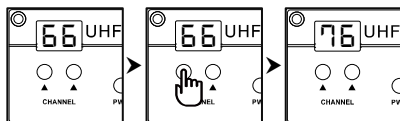

Changing channels on RP-5016M (16 channels)


Press LEFT ▲ button to increase the channel number.

 Press RIGHT ▼ button to decrease the channel number.




Audio input and gain control

1 Connect your Smart phone / tablet / MP3 player to the 3.5mm jack of AUX IN on the panel with a 3.5mm **3-pole stereo** audio cable.

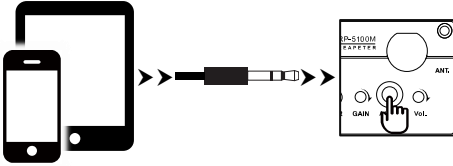


2 Use a mini screw driver to adjust the volume of the input audio.

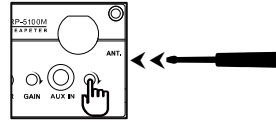


Adjust internal audio gain level

Use a mini screw driver to adjust the volume of audio sources in the master unit.

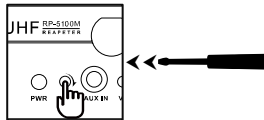

Output power setting

- **LOW** position for low output power and **HI** for high output power.
- Low output power will reduce the RF transmission distance and high output power will extend the possible RF transmission distance.
- If the module is installed on battery-powered amplifiers, remember HIGH output power places slightly more load on the battery and will reduce operating duration faster than LOW output power.

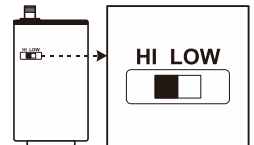

CHIAYO ELECTRONICS CO., LTD.

Http://www.chiayo.com.tw | Email: sales@chiayo.com.tw
Office: 30, Lane 27, Section 4, Jen-Ai Road, Taipei 10685, Taiwan
Tel: 886-2-27415741 | Fax: 886-2-27525242
Factory: 88, Chung-Hsiao Street 2, Chiayi 60080, Taiwan
Tel: 886-5-2711000 | Fax: 886-5-5767611



1211269