



BEAMZ
MADE
EAZY

152.087 V1.4

IGNITE220

QUICK START GUIDE

CONTROL MENU


MENU		DESCRIPTION
DMX ADDRESS	A001-AXXX	DMX address setting
CHANNEL MODE	15CH	15CH mode
	13CH	13CH mode
	17CH	17CH mode
AUTO RUN	Program 1-9	Master/Alone
MUSIC RUN	Program 1-9	Master/Alone
RESET DEFAULT	Yes/No	Reset Default
SIGNAL SET	Wire	DMX input
REVERSE PAN	(On/Off)	Reverse Pan
REVERSE TILT	(On/Off)	Reverse Tilt
SELECT PAN	630°/540°/360	Select Pan
SELECT TILT	270°/180°/90°	Select Tilt
MIC SENSITIVITY	0-99%	Mic sensitivity setting
OFF SIGNAL MODE	(On/Off)	
FAST SCAN	(On/Off)	
RESET	Total Reset	Total Reset
	Scan Reset	Scan Reset
	Color Reset	Color Reset
	Gobo Reset	Gobo Reset
	Others Reset	Others Reset
CHANNEL	PAN=XXX.....	Manual channel control
CALIBRATION	PAN=XXX.....	Calibration

DMX CHANNELS

CHANNEL			FUNCTION	VALUE	DESCRIPTION
15CH	13CH	17CH			
1	1	1	Pan	000-255	PAN movement
2		2	Pan-fine	000-255	Fine control of Pan movement
3	2	3	Tilt	000-255	Tilt movement
4		4	Tilt-fine	000-255	Fine control of Tilt movement
5	3	5	Color wheel	000-015	Open / white
				016-031	Color 1
				032-047	Color 2
				048-063	Color 3
				064-079	Color 4
				080-095	Color 5
				096-111	Color 6
				112-127	Color 7
				128-189	Forwards rainbow effect from fast to slow
				190-193	Color rotation stop
				194-255	Backwards rainbow effect from slow to fast
6	4	6	Gobo wheel	000-009	Open
				010-019	Gobo 1
				020-029	Gobo 2
				030-039	Gobo 3
				040-049	Gobo 4
				050-059	Gobo 5
				060-079	Gobo 6
				080-099	Gobo 1 shake slow to fast
				100-119	Gobo 2 shake slow to fast
				120-139	Gobo 3 shake slow to fast
				140-159	Gobo 4 shake slow to fast
				160-179	Gobo 5 shake slow to fast
				180-219	Gobo 6 shake slow to fast
				220-255	Rot. Gobo wheel cont. Rotation slow to fast
7	5	7	Gobo rotation	000-003	No function
				004-127	Forwards gobo rotation from fast to slow
				128-131	Gobo rotation stop
				132-255	Backwards gobo rotation from slow to fast
8	6	8	Gobo wheel 2	000-014	Open
				015-029	Gobo 1

				030-044	Gobo 2
				045-059	Gobo 3
				060-074	Gobo 4
				075-089	Gobo 5
				090-104	Gobo 6
				105-119	Gobo 7
				120-134	Gobo 1 shake slow to fast
				135-149	Gobo 2 shake slow to fast
				150-164	Gobo 3 shake slow to fast
				165-179	Gobo 4 shake slow to fast
				180-194	Gobo 5 shake slow to fast
				195-109	Gobo 6 shake slow to fast
				210-224	Gobo 7 shake slow to fast
				225-255	Rot.gobo wheel cont. Rotation slow to fast
9	7	9	Shutter	000-031	Shutter closed
				032-063	Shutter open
				064-095	Strobe effect slow to fast
				096-127	Shutter open
				128-143	Pulse-effect in sequences open light slow to fast
				144-159	Pulse-effect in sequences close light fast to slow
				160-191	Shutter open
				192-223	Random strobe effect slow to fast
				224-255	Shutter open
10	8	10	Dimmer	000-255	Dimmer 0% - 100%
11	9	11	Focus	000-255	Focus in to Focus out
12	10	12	Zoom	000-255	Zoom in to Zoom out
13	11	13	Rotating prism,Prism	000-005	OFF
				006-127	ON
				128-189	Clockwise rotation from fast to slow
				190-193	Prism rotation stop
				194-255	Counterclockwise rotation from fast to slow
14	12	14	Speed pan/tilt	000-225	Max to min speed
			Special blackout	226.-235	Blackout by movement
			Special blackout 2	236-245	Blackout by all wheel changing
				246-255	No function
15	13	15	Special function	000-079	No Function
				080-084	All Motor reset

			085-087	Scan motor reset
			088-090	Colors motor reset
			091-093	Gobo motor reset
			094-096	No function
			097-099	Other motor reset
			100-108	Internal program 1
			109-117	Internal program 2
			118-126	Internal program 3
			127-135	Internal program 4
			136-144	Internal program 5
			145-153	Internal program 6
			154-162	Internal program 7
			163-171	Internal program 8
			172-180	Internal program 9
			181-189	Internal Sound program 1
			190-198	Internal Sound program 2
			199-207	Internal Sound program 3
			208-216	Internal Sound program 4
			217-225	Internal Sound program 5
			226-234	Internal Sound program 6
			235-243	Internal Sound program 7
			244-252	Internal Sound program 8
			253-255	Internal Sound program 9
16	Color	Time	000-255	Max to min speed
17	Gobo	Time	000-255	Max to min speed

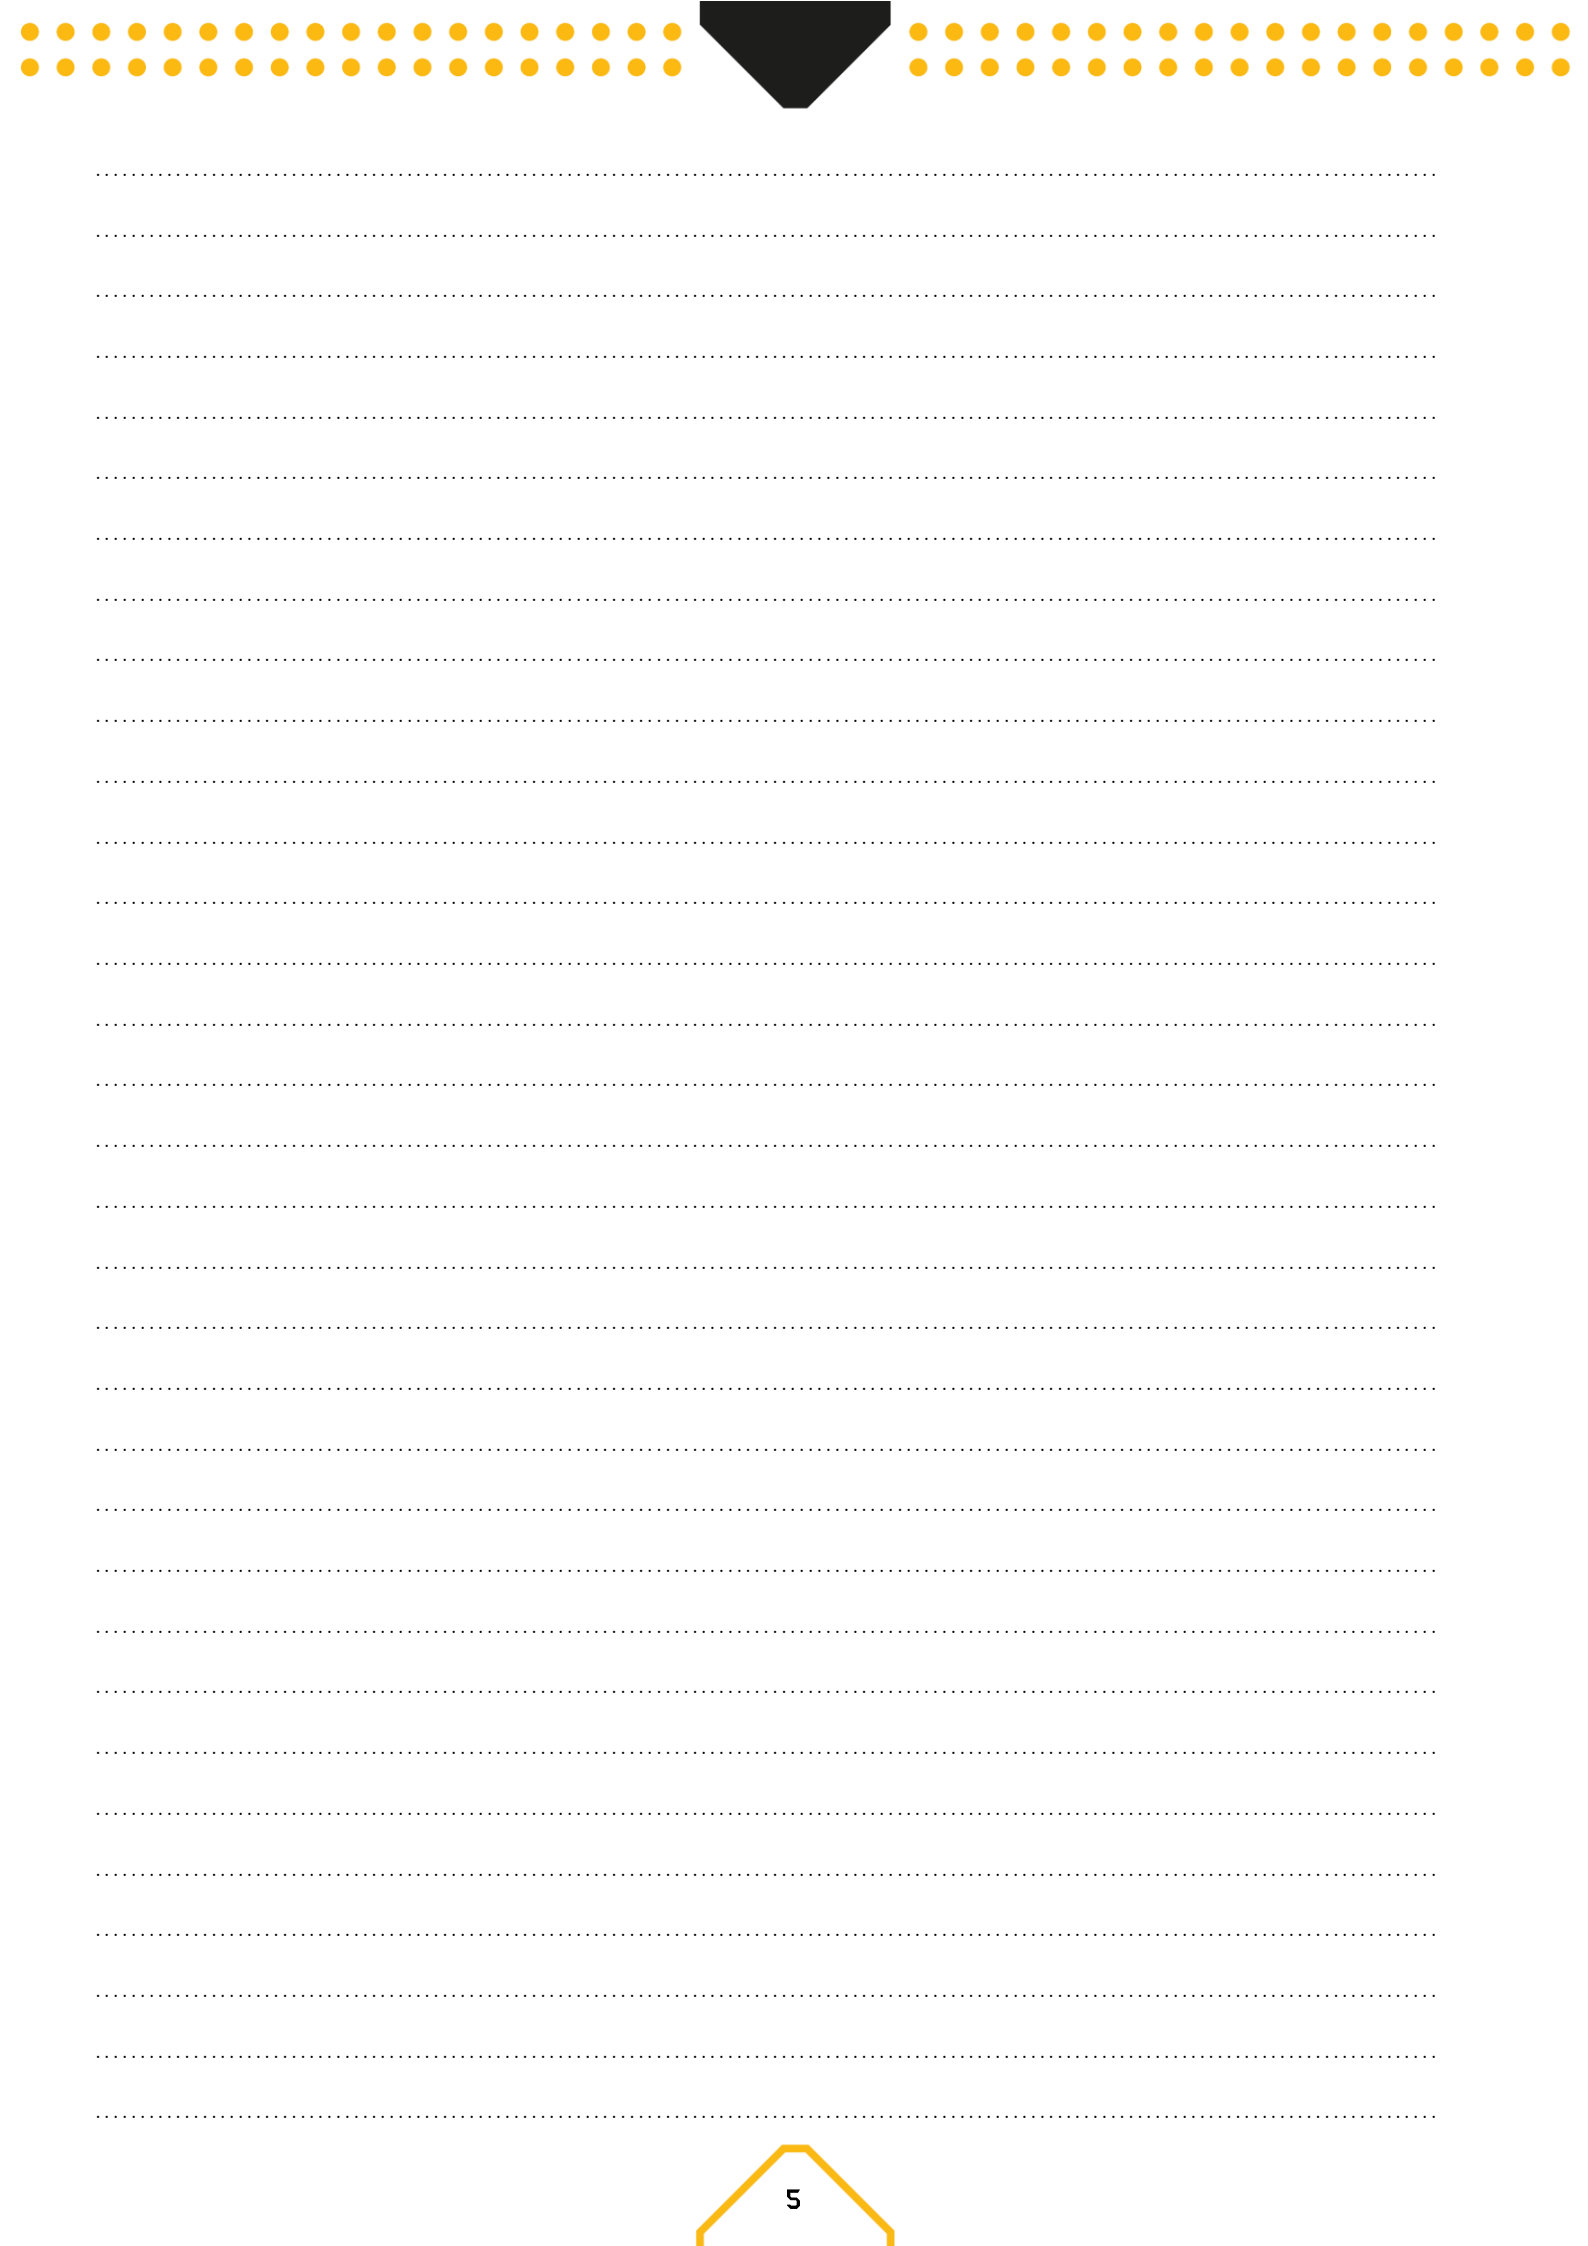



Handwriting practice lines consisting of 25 horizontal dotted lines.



BEAMZ

YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT

 **beamZ^{Pro}**

offers a wide range of high performance lighting equipment and related accessories for the rental, entertainment and architectural lighting markets. BeamZ Pro stands for performance, innovation and value pricing!



BEAMZLIGHTING.COM